


# FIRST TEAM SPORTS, INC.

## FreeKick™ Backyard Soccer Goal

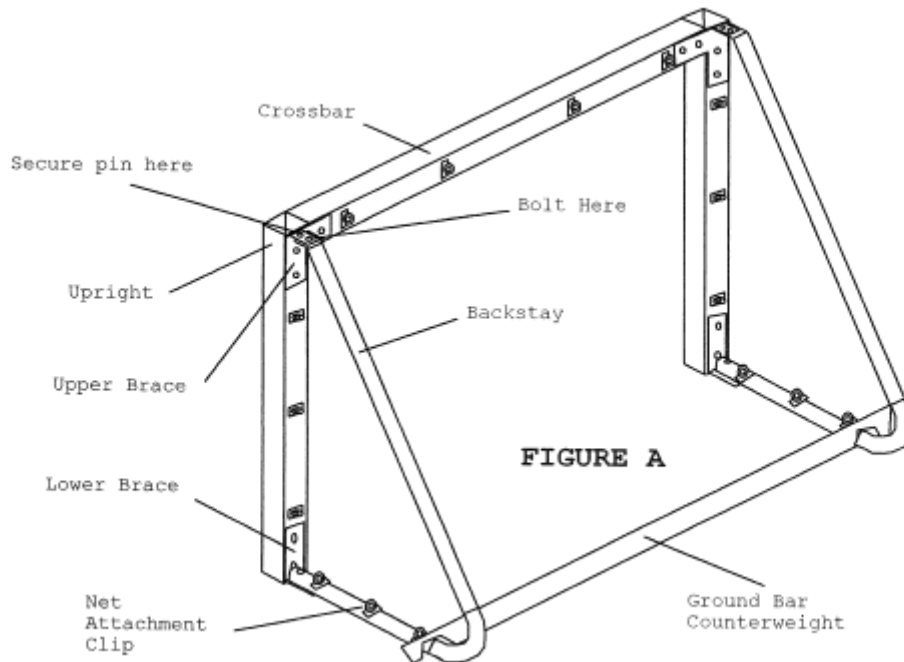

### **Bill Of Materials**

(2) Upright	(16) Klip-It™ Net Fasteners
(1) Crossbar	(14) 3/8" x 1 1/4" Hex Bolt
(2) Upper Brace	(2) 3/8" x 2 1/2" Hex Bolt
(2) Lower Brace	(32) 3/8" Flatwasher
(2) Backstay	(16) 3/8" Lockwasher
(1) Net	(16) 3/8" Hex Nut
(2) 3/8"x 2 1/2" Cotterless Pin	(1) Ground Bar Counterweight

Cross-check items with Bill of Materials. Report any shortages to First Team customer service immediately, 1-888-884-6677.

1. Remove all FreeKick components from box.
2. Lay Crossbar face down on a working surface.
3. Attach Upper Brace to Crossbar using (2) 3/8"x 1 1/4" Hex Bolts, Flatwashers, Lockwashers and Hex Nuts as shown in Figure A. Repeat for opposite side of Crossbar. **NOTE: Insert bolts so the head of the hex bolt is on the OUTSIDE of unit. Flatwashers, lockwashers and hex nuts should be on the INSIDE of the square soccer goal tubing.**
4. Attach Uprights to Upper Brace as shown in Figure A using (2) 3/8" x 1 1/4" Hex Bolts, Flatwashers, Lockwashers and Hex Nuts. **NOTE: Insert bolts so the head of the hex bolt is on the OUTSIDE of unit. Flatwashers, lockwashers and hex nuts should be on the INSIDE of the square soccer goal tubing.**
5. Attach Lower Brace to bottom of Uprights using (2) 3/8"x 1 1/4" Hex Bolts, Flatwashers, Lockwashers and Hex Nuts. **NOTE: Insert bolts so the head of the hex bolt is on the OUTSIDE of unit. Flatwashers, lockwashers and hex nuts should be on the INSIDE of the square soccer goal tubing.**
6. Next, attach the top of each Backstay to the Upper Brace as shown in Figure A using (1) 3/8" x 1 1/4" Hex Bolt, Flatwashers, Lockwasher and Hex Nut. NOTE: There are two holes in the top of the Backstay attachment tab and two holes in the Upper Brace attachment tab. Secure the Backstay to the Upper Brace using the hole furthest back. The holes closest to the front will be used for the 3/8" pin later during assembly. **IF YOU BOLT UNIT USING THE WRONG HOLE, UNIT WILL NOT FOLD PROPERLY FOR STORAGE!** (See FIGURE A)
7. Attach the bottom of each Backstay to the Lower Brace as shown in Figure A using (1) 3/8" x 2 1/2" Hex Bolt, Flatwashers, Lockwasher and Hex Nut.
8. Secure both Backstays into their playing position by inserting (1) 3/8"x 2 1/2" Cotterless pin into the securing hole on the top of both Upper Braces. (See Figure A)
9. Next, take notice of the pre-drilled 1/4" holes located on the backside of uprights, crossbar and bottom portion of backstays. These holes are provided for attachment of First Team's Klip-It™ net fasteners.
10. Remove Klip-It net fasteners from hardware pack. Push one clip into each of the 1/4" holes on the backside of Uprights and Crossbar as shown in Figure A making certain to orient the clips so the attachment rope on the net will feed through the clip properly.
11. Next, push the remaining clips into the 1/4" holes provided on the lower portion of the Backstays as shown in Figure A. Remember to be certain clips are oriented properly for net attachment.
12. Release each clip on soccer goal.
13. Stand FreeKick into an upright position.
14. Place the Ground Bar Counterweight into position as far back on the backstays as possible as shown in FIGURE A.
15. Drape net over goal from back of unit. Net will rest on TOP of the backstays. When you are satisfied with net position, fasten net to goal using Klip-It™ net fasteners.

FOR STORAGE: First, remove Ground Bar, then simply remove both 3/8" securing pins, fold backstays inward and stow. It is best to replace storage pins into securing holes during storage to prevent loss. You do not need to remove net for storage.

Assembly of your FREEKICK soccer goal is complete.

**FIRST TEAM SPORTS, INC.**  
**902 Corey Road**  
**Hutchinson, KS 67501**  
**1-888-884-6677**  
**www.firstteaminc.com**