


FIRST TEAM SPORTS, INC.

PORTACOURT™ SPORT BASE

ASSEMBLY INSTRUCTIONS (12/4/17)

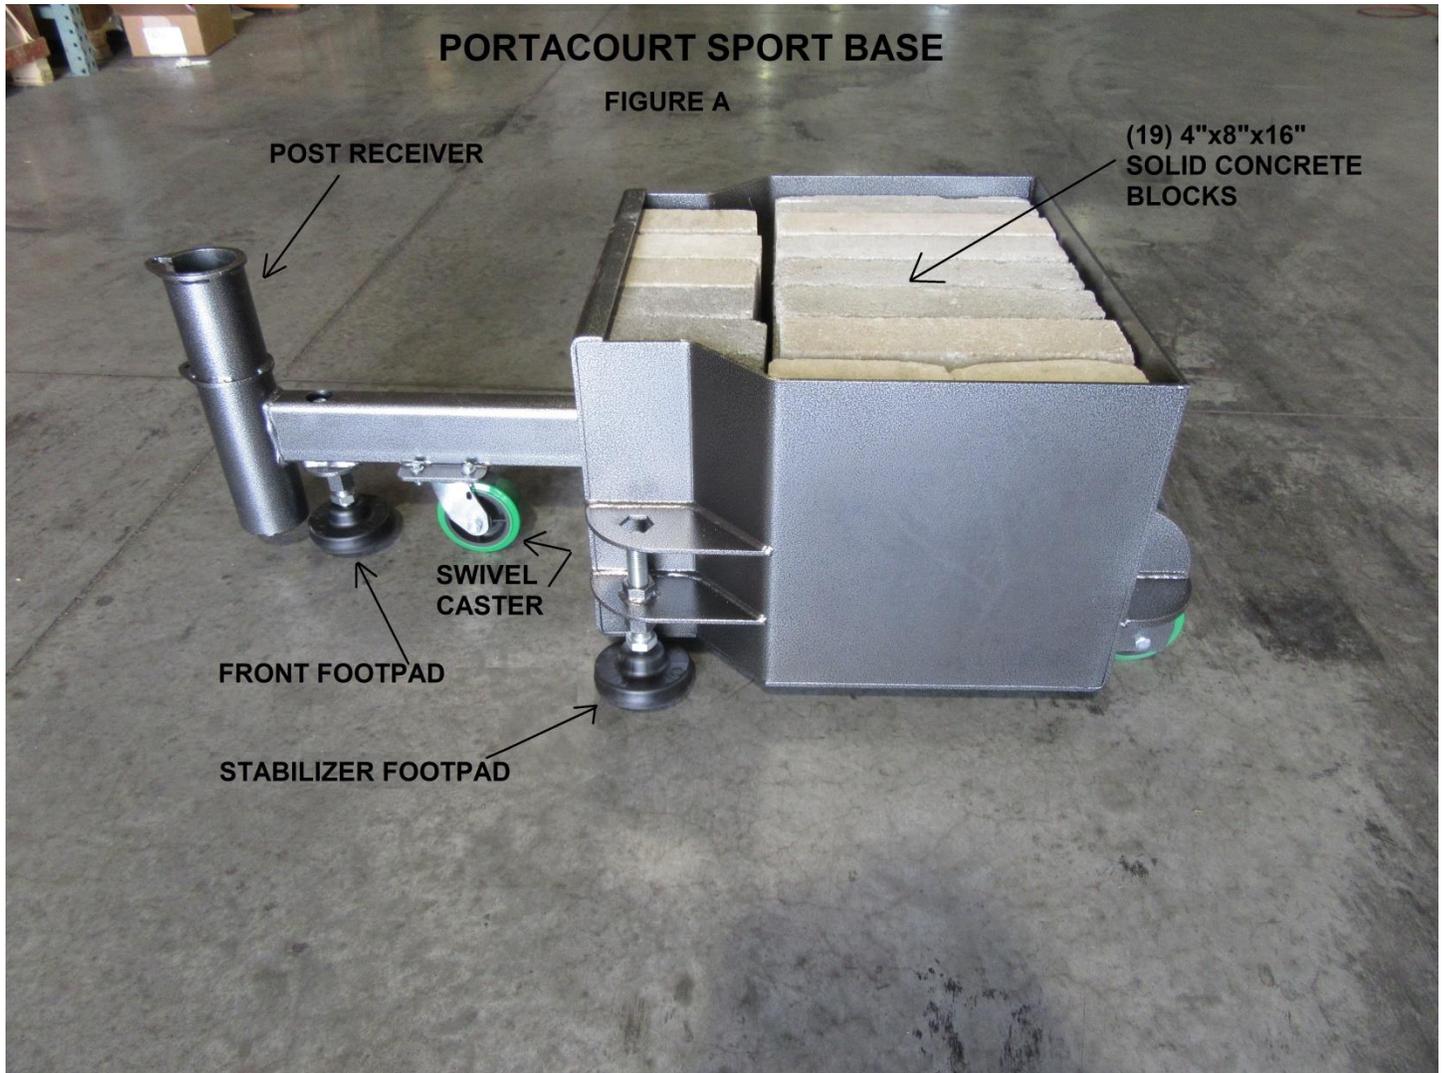

***NOTE:** You should receive additional equipment to be attached to each Portacourt base you received. Please cross reference the bill of materials provided with that equipment to make sure you received all necessary parts. If any shortages please contact First Team customer service immediately at 1-800-649-3688.

- 1. Remove each Portacourt base from its pallet. Each base unit should have three protective FOOTPADS intact. If any are missing contact First Team for replacements.**
- 2. Roll each Portacourt base unit to its appropriate location on the court keeping in mind to position the POST RECIEVER where needed for correct post location.**

3. INSTALL CONCRETE BLOCKS - Each base unit requires installation of (19) 4"x8"x16" solid concrete blocks. These blocks may be purchased at any builders supply center. Load (19) 4"x8"x16" blocks into the ballast box of each base unit as shown below.



4. Using a socket wrench with extension and $\frac{3}{4}$ " socket, lower the FRONT FOOTPAD onto the floor so the caster wheel is approximately $\frac{1}{4}$ "- $\frac{1}{2}$ " off the floor.



5. Next, lower the STABILIZER FOOTPADS down until they touch the floor on both the left and right sides of the ballast box as shown below.



6. Insert the post(s) that came with your Portacourt Sport Base(s) into the POST RECIEVER sleeve on each base unit.

AT THIS POINT YOU MUST FOLLOW THE INSTRUCTIONS INCLUDED WITH YOUR POSTS FOR ATTACHING THE HARDWARE AND NET TO THE POSTS. UNPACK HARDWARE THAT CAME WITH YOUR SPORT POLES AND FOLLOW THE INSTRUCTIONS FOR HARDWARE AND NET ATTACHMENT.

7. Once posts and net are installed, attach base pads and posts pads (if provided). Follow pictorial below for padding installation.

Slide the ballast pad over top of the ballast box lining up the notch in the pad with the extension neck as shown below.



Ballast pad installed below.



Install the extension neck pad as shown below. Be sure to peel the backing off the adhesive velcro and press in place as shown below.



Extension neck pad installed below.



If your setup includes post pads, install them now as shown below.



Additionally, if you ordered a volleyball judges stand, unpack and position the stand overtop of the ballast box at one end of the net as shown below.

PORTACOURT ASSEMBLY IS COMPLETE – REFER TO ASSEMBLY INSTRUCTIONS PROVIDED WITH YOUR POSTS AND NET FOR INSTRUCTIONS ON NET TENSIONING, ETC.